


COM SEL (JB9) Settings:
A - for normal operation, jumper 1 to 2, and 5 to 6 (marked US)
B - for RF-to-9S12G communication, jumper 2 to 4, and 3 to 5 (marked SX)
C - for RF-to-host connection, jumper 1 to 3, and 4 to 6 (marked UX)

RF refers to device plugged into J10 (ADXB, BOBESP12, etc.)

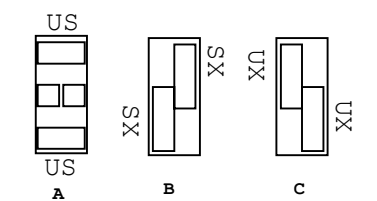

NOTE: By installing a suitable header for J10, either an ADXB adapter or a BOBESP12 module may be plugged into J10, supporting the use of an Xbee RF module or WiFi, respectively.

Rev. 2:
 - added R14
 - fixed J8 pinout on PCB

www.technologicalarts.com
 support@technologicalarts.com sales@technologicalarts.com

Technological Arts, Inc.

EsduinoXtreme 9S12G MCU Module

Title	EsduinoXtreme 9S12G MCU Module		Rev	2
Size	Document Number	FILE: esd-x2.dsn		
Date:	Friday, January 27, 2017	Sheet	1	of 1