


**COM SEL (JB9) Settings:**  
**A** - for normal operation, jumper 1 to 2, and 5 to 6 (marked US)  
**B** - for RF-to-9S12 communication, jumper 2 to 4, and 3 to 5 (marked SX)  
**C** - for RF-to-host connection, jumper 1 to 3, and 4 to 6 (marked UX)

RF refers to device plugged into J10 (ADXB, BOBESP12, etc.)

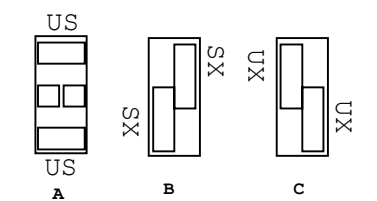

**NOTE:** By installing a suitable header for J10, either an ADXB adapter or a BOBESP12 module may be plugged into J10, supporting the use of an XBee RF module or WiFi, respectively.

Rev. 3"  
 - added JB10 to select signal source for J8-5

Rev. 2:  
 - added R14  
 - fixed J8 pinout on PCB

www.technologicalarts.com  
 support@technologicalarts.com sales@technologicalarts.com

**Technological Arts, Inc.**

**EsduinoXtreme 9S12G MCU Module**

Title	FILE: esdx-3.dsn		Rev	3
Size	Document Number			
B				
Date:	Friday, November 02, 2018	Sheet	1	of 1