

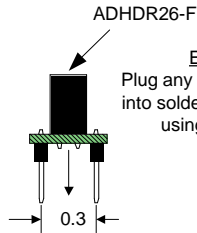



Example A
Fully-populated backplane with one MicroCore-11 module, a memory expansion card, and two prototyping cards

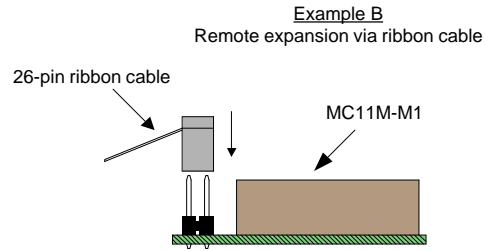



Example C
Plug any -RA or -M module into solderless breadboard, using this adapter

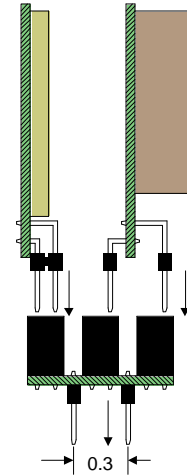



Example E
Plug two boards into solderless breadboard at once

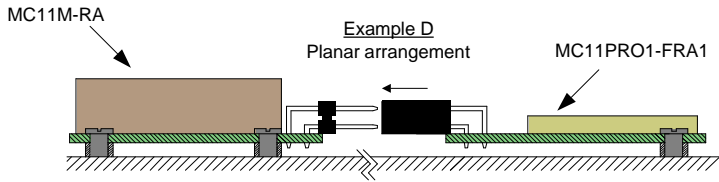

Example F
Add a prototyping card or application card to an -RA module

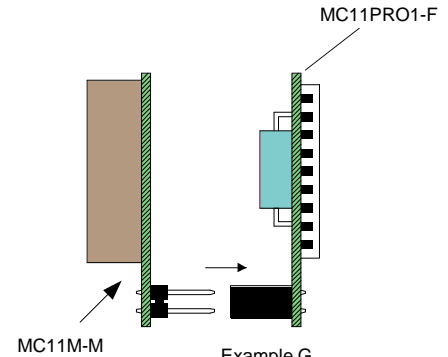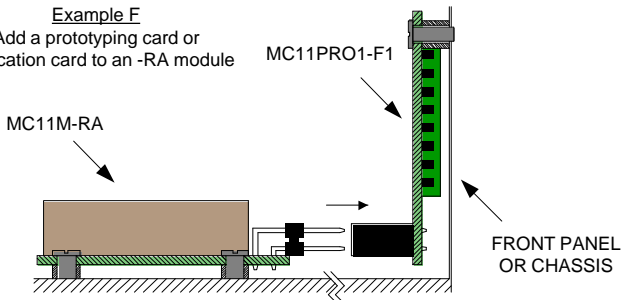

Example G
Low-cost stacking configuration adds a prototyping card or application card to an -M module

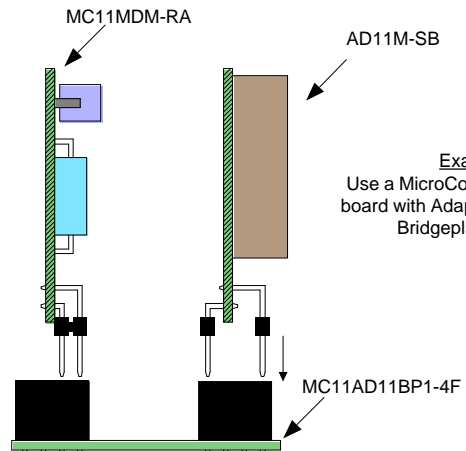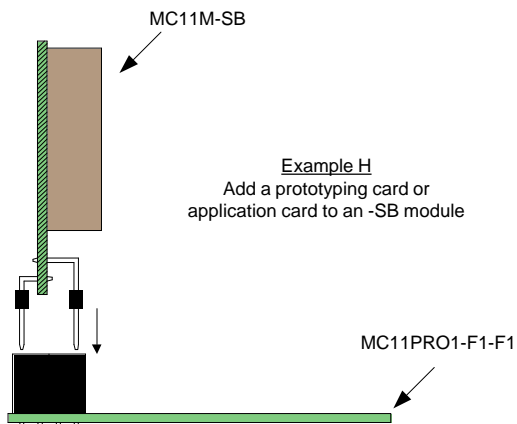

Example I
Use a MicroCore-11 motor driver board with Adapt11 by means of a Bridgeplane adapter